

# TempTab Gauge

\* \* \* \* \* **Please Read Before Assembly** \* \* \* \* \*

The gauge is shipped calibrated and ready for use

## Assembly Instructions

- 1) Attach plunger to lower left side of gauge.
- 2) Turn the gauge on using the green “ON/OFF” button
- 3) To verify calibration, place the ISO certified one inch calibration block (inside red protective container) into the fixture. Gauge should read 25.4 mm.

If the gauge reads 25.4 mm the gauge is ready for use!



READY TO USE TEMPTAB GAUGE

---

## Instructions to Re-Calibrate Gauge

**(Follow this procedure only when the calibration block is placed in the gauge and the gauge does not read 25.4mm)**

- 1) Place the calibration block into the fixture and press and release the Blue “SET” button until the “P” is flashing.
- 2) Press the “SET” button one more time. Gauge is now calibrated.

To verify calibration, place the ISO certified one inch calibration block into the fixture. The gauge should read 25.4 mm.

If the gauge reads 25.4 mm the gauge is calibrated and ready for use!